
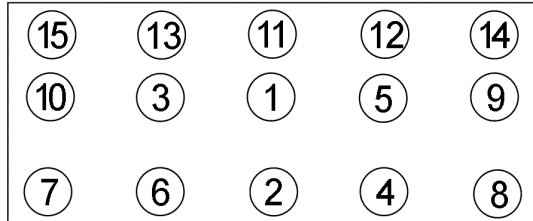


Anziehvorschrift für Zylinderkopf	069.404	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	GM

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	M11 Pos. 1-10: 30 Nm Pos. 1-10: 90° Pos. 1-10: 70°	M8 Pos. 11-15: 30 Nm
---	-------------	---	-------------------------

Zeichenerklärung / Explanations / Explication / Explicacion

* ★ □ ● ➤	neue Zylinderkopfschrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
-----------------------	--	---	---	--

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 102,6 mm; ⚓: 1,33 mm

Mot: LFA, LS2, LZ1, LQ4, LQ9
6,0 ltr. V8

CTS, Escalade, Silverado, SSR, Suburan,
Tahoe, Trailblazer,
Savanna, Sierra

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

069.404