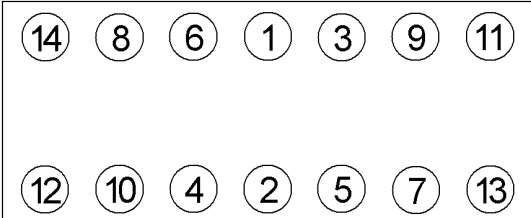


Anziehvorschrift für Zylinderkopf		477.322 passend für / suitable for adaptable à / adaptable a BMW	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 233.380 M 12x1,5x200				
Anziehen/ Tightening/ Serrage/ Apriete	✱ ☐ ➤ ➤	70 Nm 180° 50 Nm 120° 120°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Mot. N57 D30 1,55mm Ø84,7mm				
E90/E91/E92/93 325d, 330d, xd				
F07GT/F10 525d, 530d, xd, 535d				
F01/F02 730d, Ld, 740d				
E70 X5 30dX, 40dX				
E71 X6 30dX, 40dX				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*477.322*	