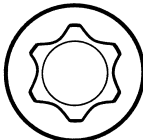
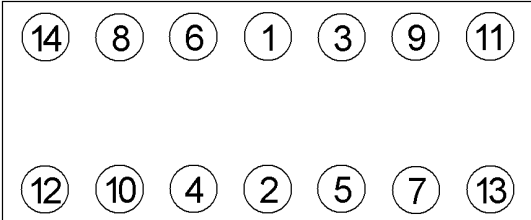


Anziehvorschrift für Zylinderkopf		713.173	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for	
Instructions de serrage pour culasse		adaptable à / adaptable a	
Prescripciones de apriete para culatas		BMW	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 233.380 M 12x1,5x200			
Anziehen/ Tightening/ Serrage/ Apriete	* 70 Nm □ 180° 50 Nm ➤ 120° ➤ 120°		
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Mot. N57N/Z D30 ⚙1,55mm F30 330d F07/F10/F11 530d,dX, 535d,dX F06/F12/F13 640d,dX F01/F02 730d,dX, 740d,dX/ 730Ld F25 X3 30dX, 35dX 2 Löcher, Holes, Trous, Agujeros, Fori			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*713.173*	