



Astra-Calibra

1

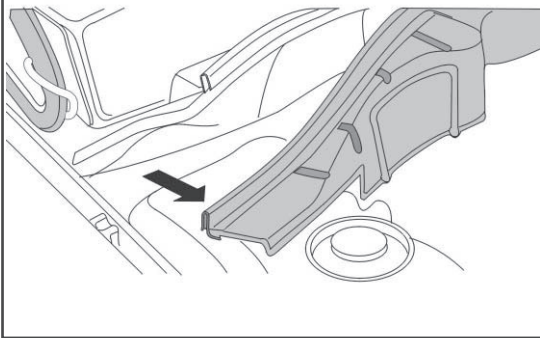


1

Corsa-Tigra

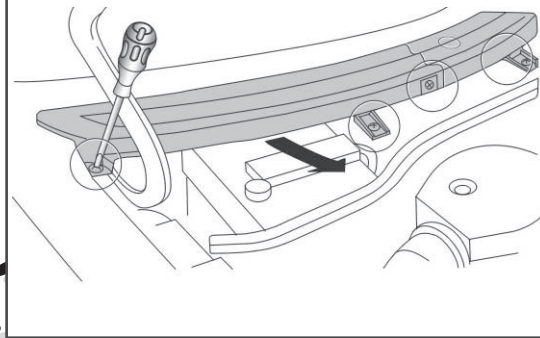


Astra-Calibra

2

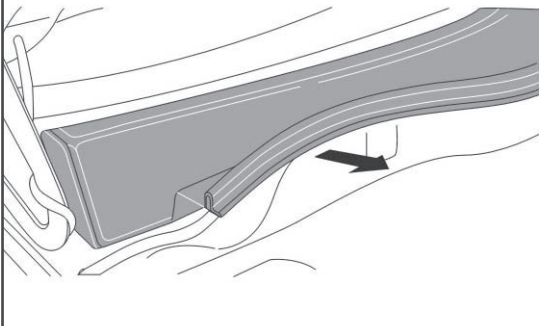


2

Corsa-Tigra

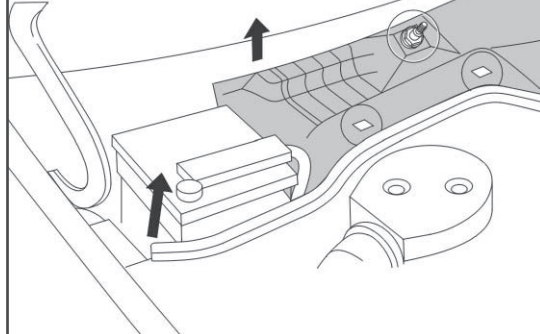




Astra-Calibra

3

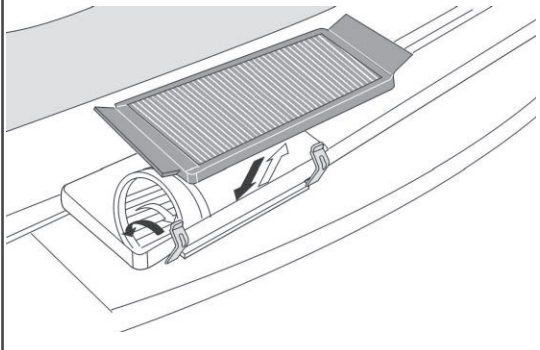


3

Corsa-Tigra

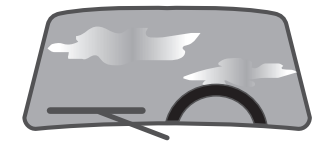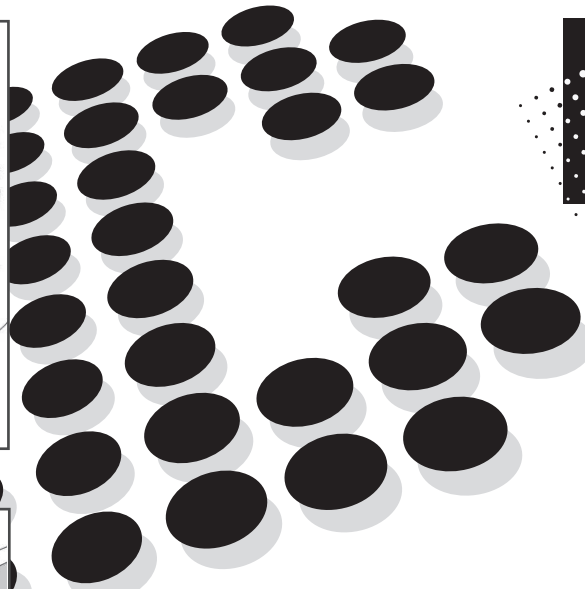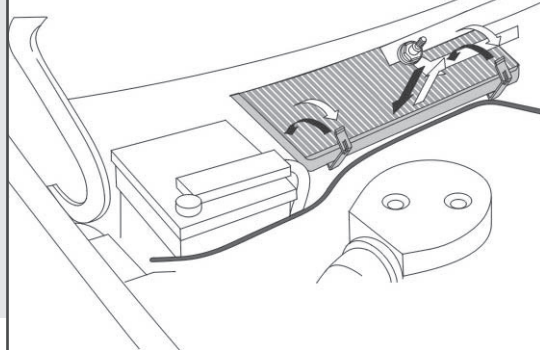

filters NC 2001 - NC 2079CA

Opel Astra 10' - Calibra 20'
Opel Corsa 20' - Tigra 10'

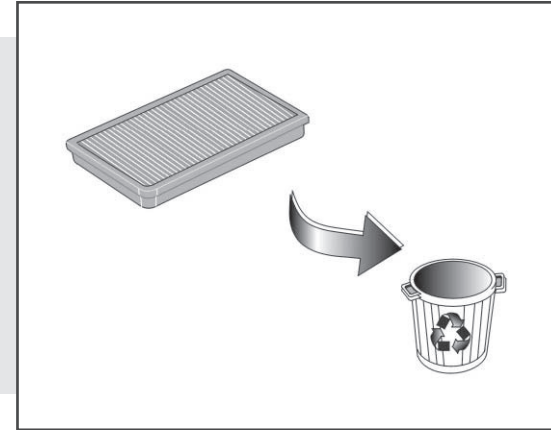

Per il montaggio procedere eseguendo le operazioni in senso inverso.

Continue mounting in reverse order of operations.

Le remontage s'effectue dans l'ordre inverse.

Der weitere Einbau erfolgt in umgekehrter Reihenfolge.

Para concluir la instalaci3n, seguir el orden inverso.

