



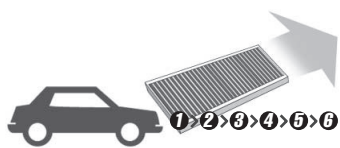


Honda CR-V

1

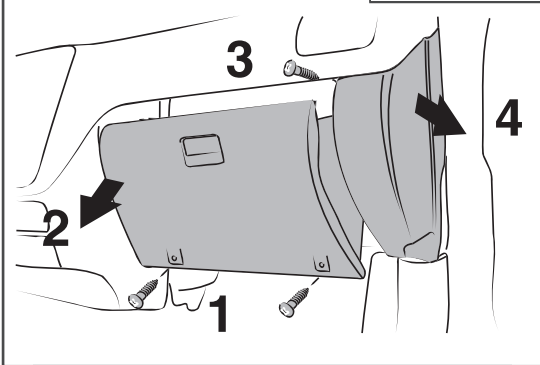


1

Rover 400-Serie

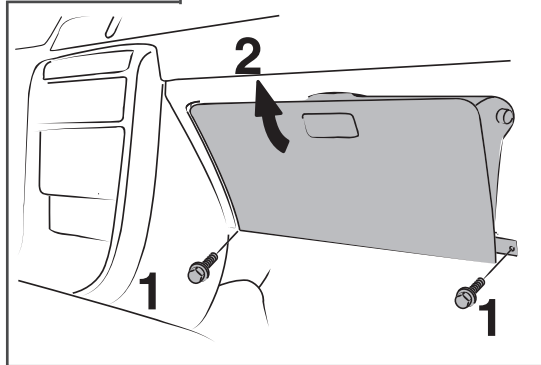


Honda CR-V

2

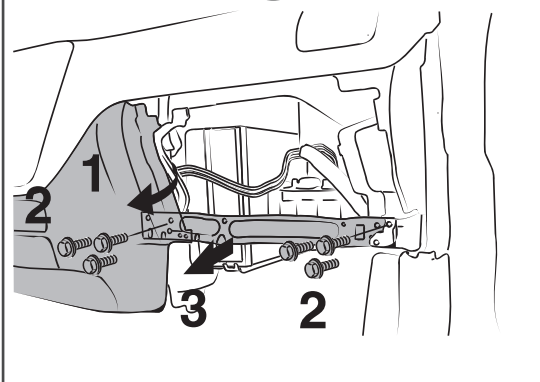


2

Rover 400-Serie

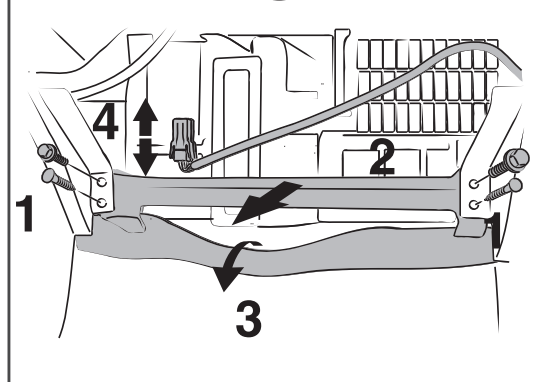


1

Honda Civic

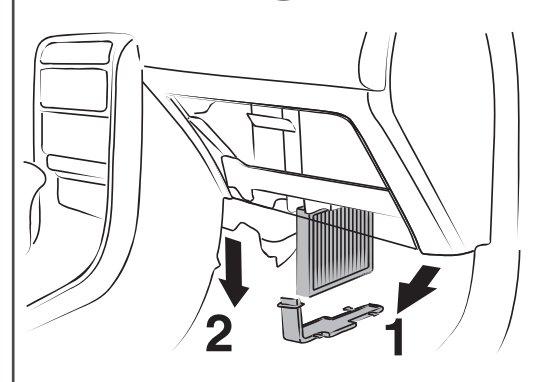


Honda CR-V

3

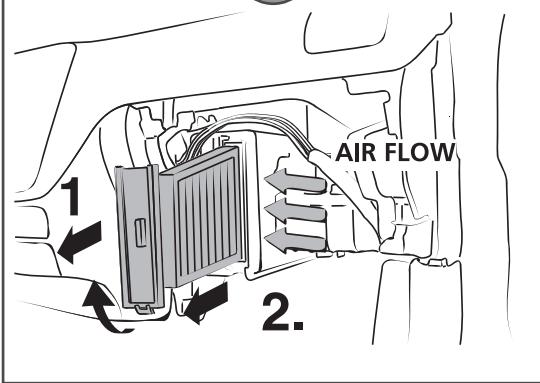


3

Rover 400-Serie

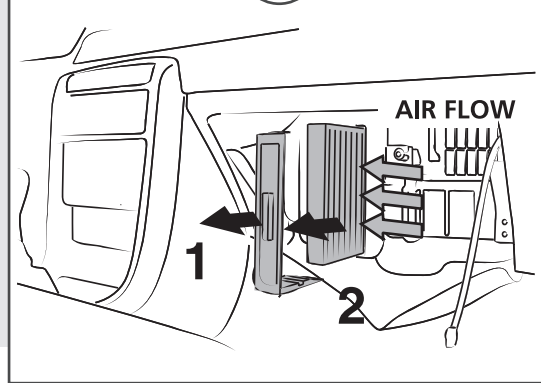



2

Honda Civic

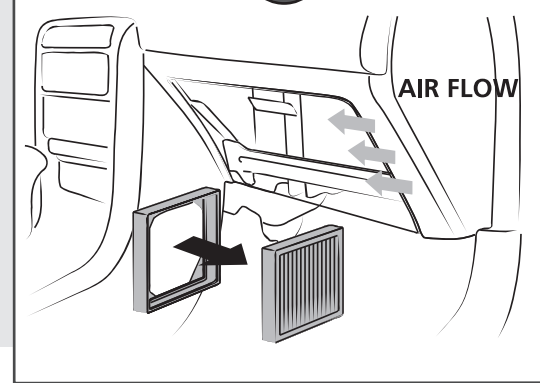

filters NC 2090

HONDA Civic, CR-V, ROVER 400

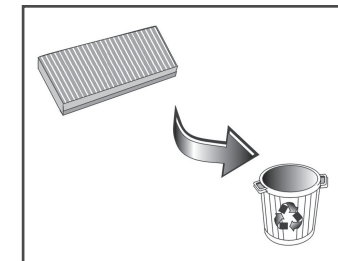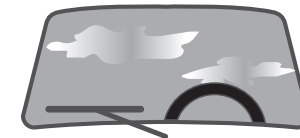

Per il montaggio procedere eseguendo le operazioni in senso inverso.

Continue mounting in reverse order of operations.

Le remontage s'effectue dans l'ordre inverse.

Der weitere Einbau erfolgt in umgekehrter Reihenfolge.

Para concluir la instalación, seguir el orden inverso.

