

**E**

## INSTRUCCIONES DE MONTAJE

Para instalar correctamente el elevavinas, haga lo siguiente:

- Desmonte el panel puerta con cuidado y extraiga el antiguo elevavinas, debe desconectarlo mecánicamente y eléctricamente.
- Introduzca el elevavinas de recambio en la puerta en el espacio específico "1".
- Fije la guía del elevavinas en la puerta en los puntos "2".  
**Nota:** no hace falta fijar el motor a la puerta pues el mismo es solidario a la guía.
- Conecte el elevavinas eléctricamente.
- Enganche el cristal en el elevavinas.
- Ajustar la posición de ambas pinzas respecto al cristal para que el patín de plástico "P" quede centrado dentro del alojamiento de deslizamiento (ver "B").
- Controle el funcionamiento general. Monte de nuevo el panel de la puerta.

Grazias por haber elegido nuestros productos.


**GB**

## ASSEMBLY INSTRUCTIONS

To install the window regulator:


- Disassemble the door: carefully disconnect the old window regulator mechanically and electrically and remove it.
- Place the new window regulator in the door through the opening "1".
- Attach the guide of window regulator to points "2".  
**N.B.** It is not necessary to attach the motor to the door panel as it is fixed to the rail.
- Connect the window regulator to the car's electrics.
- Attach the car window glass to the window regulator.
- Adjust both grips so that the plastic sliding blocks "P" are positioned in the middle of the runners (point "B").
- Check overall functioning: reassemble the door.

Thank you for choosing our products.

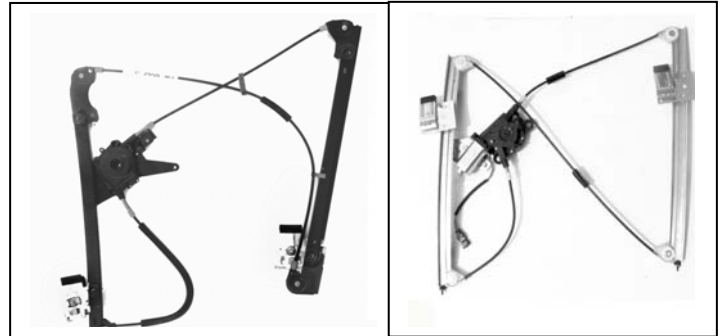

Elevalunas original  
Oem window regulator

Nuestro elevalunas  
Our window regulator

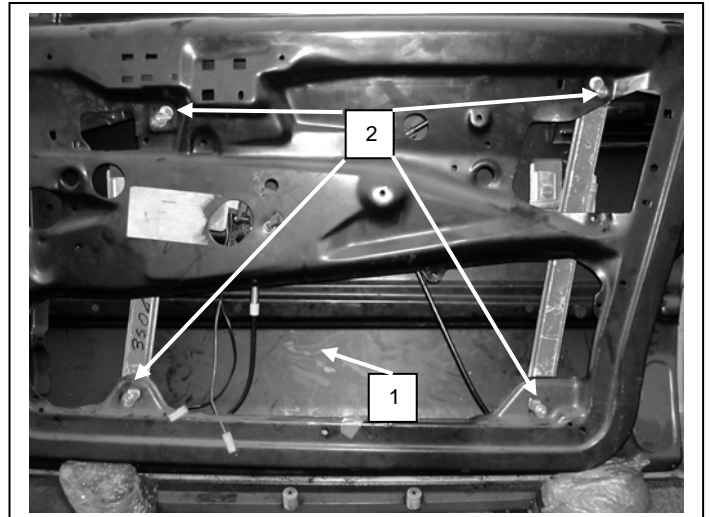

Puerta lado derecho, Right front door

**B**

NO

NO

OK

