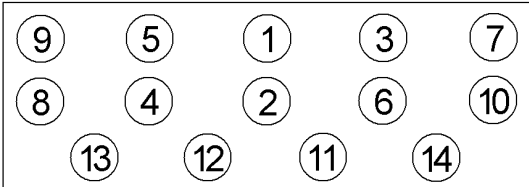


Anziehvorschrift für Zylinderkopf		144.140 passend für / suitable for adaptable à / adaptable a Fiat	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
760.870 M 10 x 85/103			
Anziehen/ Tightening/ Serrage/ Apriete	* 20 Nm 40 Nm ➤ 90° ➤ 90°	M 8: 30 Nm	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor 81 mm Ø, 1,74/1,65 mm ÷ Tempra, 1372 ccm, Mot.159.A2.000, ab 1990> Tipo 1,4 i.e. Mot.160.A1.046, ab 1988>			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*144.140*	